48.6

GSLIDE 4270 & A270 Slide Outer Member Installation Guideline

In order for a side mount ball bearing slide to work properly, the cabinet and drawer sizes (measurements) must be precise. Please refer to the key points as following:

- 1. The side space between one side of cabinet and drawer must be 13mm / -0 / +0.3, in the other word, the total side space between cabinet and drawer must be within 26 - 26.6mm range. If the side space is in the 26 - 26.6mm range, the fixing screw can be screwed into any one of the three holes.
- 2. If the drawer can not be closed properly, majority of problem would be caused by one of the below two situations:
 - (1) Total side space is less than 26mm, for example at 25,7mm. To address this problem, please fix the total side space to be within 26 - 26.6mm range.
 - (2) Total side space is more than 26mm, for example at 27mm. To address this problem, please check if the fixing screw is screwed into the small round hole (Hole For Installation Mounting). If not, please change the mounting hole to the small round hole (Hole For Installation Mounting).

